

MANUAL RESET (TYPE 3)

Upon overload, the bimetal sensor snaps open, disrupting current flow.

(An insulative member moves between the open contacts preventing closure)

until reset button is depressed allowing the contacts to reclose.

(MODELS MX5, VB3, MN4)